


## Installation Instructions

1. Ensure the threaded ends of the flexible tails are clean.
2. Screw the flexible tails using a spanner and the tie-rod using a blade screwdriver into the underside of the body. Do not over tighten the flexible tails as this will damage them.
3. Position the black O-ring over the 35mm counter top hole. Locate the tap over this hole and feed the flexible tails and the tie-rod through the counter-top.
4. Underneath the counter-top push the black rubber half moon, then the metal half-moon up the tie-rod, these can be secured by screwing the nut on the tie-rod.
5. Insert the small plastic non return valves into the nut end of the flexible tails ensuring the open end of the valve is pushed in first leaving the mesh end visible. Now Install the 15mm green and attach them to the existing copper pipes.

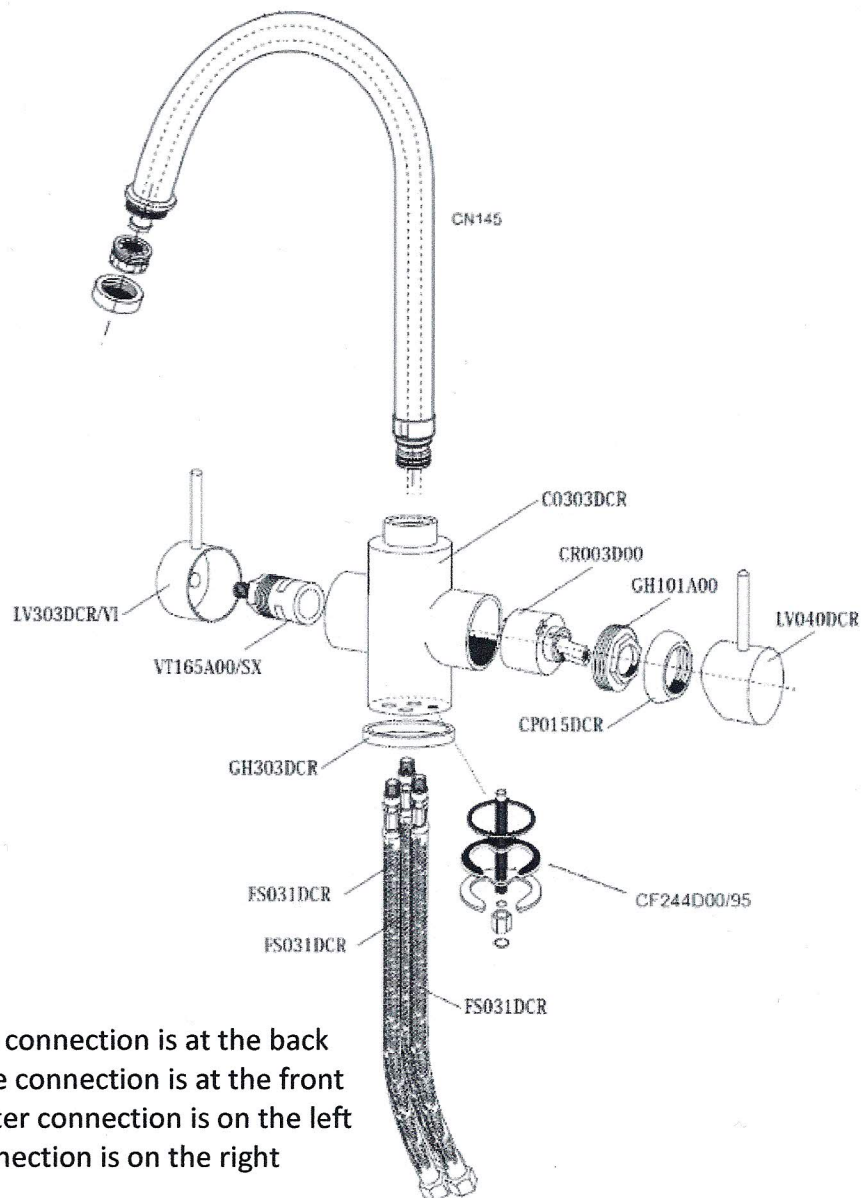

The hot flexible connection is at the back  
The cold flexible connection is at the front  
The filtered water connection is on the left  
The tie-rod connection is on the right

## Cleaning Instructions

1. It is recommended the tap surface is cleaned with warm soapy water followed with a rinse and wipe dry with a soft cloth.
2. Do not use products containing hydrochloric, formic or acetic acids as they can damage the tap.
3. Regular cleaning will prevent lime-scale from building up.